


# USER MANUAL

## SkinVibe Nuvia AirPlasma MultiStyler

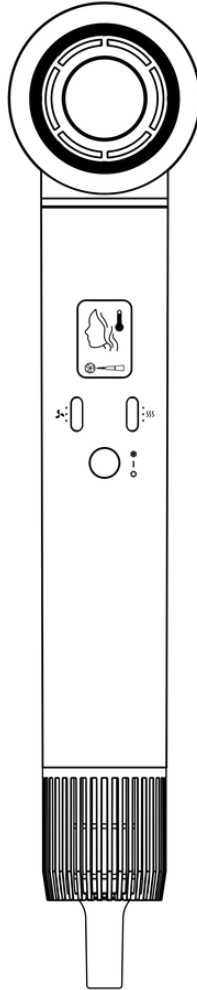

Read more at:

**[www.skinvibe.eu](http://www.skinvibe.eu)**



## English Version

### THANK YOU

We are very pleased that you chose SkinVibe!

Our priority is your satisfaction, so we make sure to provide you with high-quality products..

Please read this user manual carefully, it contains important information on the proper use of our product.

Best regards,  
SkinVibe Team

### TABLE OF CONTENTS

|                                  |    |
|----------------------------------|----|
| Introduction .....               | 14 |
| Contents of the box .....        | 15 |
| Features .....                   | 15 |
| Product description .....        | 16 |
| Button description .....         | 16 |
| How to use .....                 | 17 |
| Display .....                    | 18 |
| Styling attachments .....        | 18 |
| Cleaning the air filter .....    | 20 |
| Troubleshooting .....            | 21 |
| Safety precautions .....         | 21 |
| Technical specifications .....   | 22 |
| Warranty .....                   | 23 |
| Contact information .....        | 24 |
| Certificates .....               | 25 |
| Manuals in other languages ..... | 26 |

## CONTENTS OF THE BOX

---


- SkinVibe Nuvia AirPlasma MultiStyler
- Seven styling attachments
- User manual
- Bag for the device
- Thank you card

## FEATURES

---

- Plasma technology - generates 400 million positive and negative ions per cubic centimeter that neutralize electrostatic charges. Hair becomes smoother, less frizzy, and easier to style
- 7 interchangeable attachments for drying and styling - curls, waves, volume, and smoothing with a single device
- High-speed motor of up to 110,000 RPM delivers powerful yet quiet airflow
- 3-level wind speed control (gentle / medium / strong)
- Four temperature modes: cool air to set your style, warm, hot, and an alternating hot-cold cycle
- Instant cool shot - press and hold the temperature button to get cool air for as long as you hold it
- Rotating curling barrel tip - one barrel, two curl directions
- Settings memory - after switching on, the device returns to the last temperature and speed
- Display on the handle shows the current wind speed and temperature settings
- Attachment locking system - secure mounting and quick changes with a single button
- Magnetic, detachable air filter cover makes dust removal easier
- Reduced noise level: 70 dB
- Thick 2.7 m cable that does not easily twist and is resistant to mechanical damage

# PRODUCT DESCRIPTION

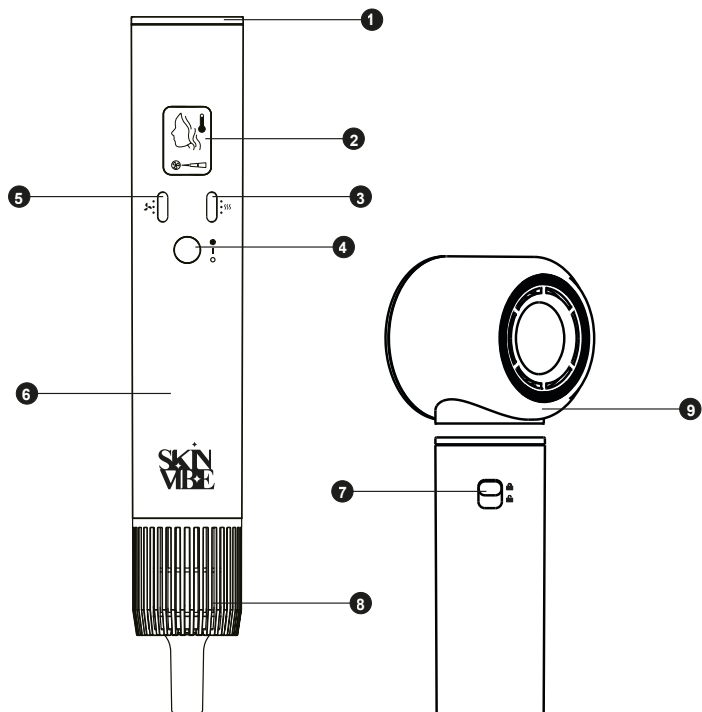

- 1

Attachment connector (air outlet)
- 2

Display
- 3

Wind temperature control button
- 4

Power ON/OFF button
- 5

Wind speed control button
- 6


Device body
- 7

Attachment release button (Lock Switch)
- 8

Magnetic filter cover
- 9

Interchangeable attachment

# BUTTON DESCRIPTION

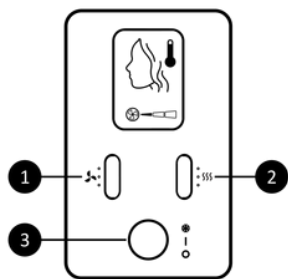

1.

**Wind speed control button:** Choose one of three wind speed settings: gentle, medium, or strong.
2.

**Wind temperature control button:** Choose one of four wind temperature settings: cool, warm, hot, or the alternating hot-cold cycle. The cool setting helps set your hairstyle at the end of styling. Press and hold the button for about 1.5 seconds to activate the instant cool shot. When you release the button, the device returns to the previous mode.
3.

**Power ON/OFF button:** Press and hold for about 2 seconds to turn the device ON or OFF.

# HOW TO USE

## 1. Power ON/OFF

- After washing your hair, dry it with a towel. Plug the device into a power socket. Press and hold the power button for about 2 seconds, then adjust the wind speed with the speed button.

## 2. Changing the air temperature


- Press the temperature button to switch between four modes: hot, warm, cool air, or the alternating hot-cold cycle.

| Mode                                                                               | Description                                                                                                                                                                                       |
|------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <b>Hot air - temperature: up to 90 °C</b><br>Fast drying. Uses the full power of the device for express results                                                                                   |
|    | <b>Warm air - temperature: up to 70 °C</b><br>Gentle, comfortable drying. Ideal for everyday care and styling without the risk of overdrying the hair                                             |
|   | <b>Cool air - temperature: up to 30 °C</b><br>Locks in the styling and smooths the hair. Closes the hair cuticles, adding shine. Use at the end of styling each strand                            |
|  | <b>Hot-cold cycle - temperature: up to 55 °C</b><br>Alternating hot and cool airflow - the temperature changes about every 3 seconds. Makes it easier to shape and set your hairstyle in one step |

## DISPLAY



- When the device is turned ON, the SkinVibe logo appears on the screen.
- The color of the icon indicates the current temperature mode:
  - blue (cool),
  - yellow (warm),
  - red (hot),
  - alternating blue-red (hot-cold cycle).

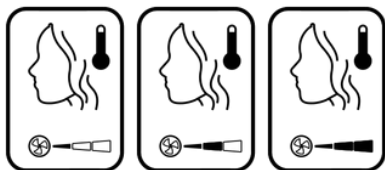

The segment bar at the bottom of the screen shows the selected wind speed level (1-3).

- 1 segment - gentle airflow,
- 2 segments - medium,
- 3 segments - strong.

## STYLING ATTACHMENTS

### Attaching and changing attachments



Slide the attachment into the device body until it locks securely in place.




To remove or change an attachment, slide the attachment release switch down, hold it and pull the attachment off.

The Concentrator and the Diffuser attach to the Quick Drying Nozzle. They are held in place magnetically and can be rotated.

**Note:** all attachments become very hot during operation.

Before changing, turn the device OFF and wait for the attachment to cool down. Remove the curling barrels by the copper tip and the Diffuser by its outer rim, and hold the body below the buttons.

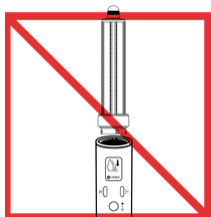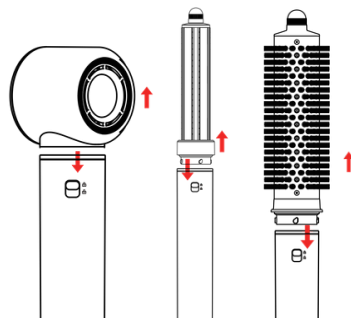

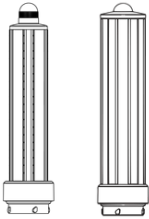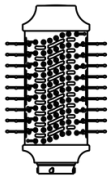
| Attachment                                                                         | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <p><b>32 mm and 40 mm Curling Barrels</b></p> <p>Cylindrical attachments with 32 mm and 40 mm diameters. The airflow wraps a strand of hair around the barrel, creating curls and waves without extreme temperatures. The narrower barrel creates bouncy curls, the wider one - soft waves and volume. Turn the copper tip of the barrel to change the direction of the airflow, so you can wrap the strand away from the face on both the left and the right side of the head.</p> |
|   | <p><b>Round Brush</b></p> <p>A round brush for adding volume from the roots. Allows drying and shaping the hair at the same time</p>                                                                                                                                                                                                                                                                                                                                                |
|    | <p><b>Oval Brush</b></p> <p>A smoothing oval brush. Makes it easier to straighten the hair and tuck in the ends while drying, giving the hairstyle a natural shape</p>                                                                                                                                                                                                                                                                                                              |
|   | <p><b>Professional Concentrator</b></p> <p>Precision styling concentrator, ideal for accurately shaping specific sections of hair. Provides controlled airflow, making it easier to create detailed hairstyles</p>                                                                                                                                                                                                                                                                  |
|  | <p><b>Quick Drying Nozzle</b></p> <p>A wide attachment for fast, initial drying of the entire hair surface before styling</p>                                                                                                                                                                                                                                                                                                                                                       |
|  | <p><b>Diffuser</b></p> <p>A large, round attachment with internal prongs. Distributes the air evenly, creating defined curls and minimizing frizz</p>                                                                                                                                                                                                                                                                                                                               |

# CLEANING THE AIR FILTER

---

We recommend cleaning the air filter regularly to remove accumulated dust, which ensures smooth operation of the device.

- 1. Turn the device OFF, unplug it from the power source, and let it cool down.
- 2. The filter cover is attached magnetically - grip the handle and slide the filter cover down.
- 3. Wipe off the dust with a soft cloth, tissue, or a dry brush.
- 4. Put the filter cover back onto the handle - a distinct click means it is mounted correctly.

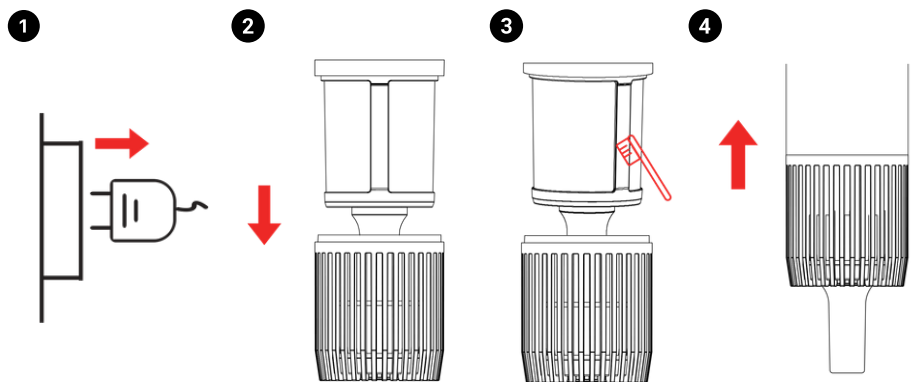

**Do not wash the filter or the internal steel mesh with water.** It may cause device malfunction.  
Recommended cleaning frequency: every 2-4 weeks with daily use.

## TROUBLESHOOTING

---

If the device is not working properly, check the tips below. If the problem persists, do not disassemble the device yourself - contact customer service: [RMA@itrq.pl](mailto:RMA@itrq.pl)

| Problem                                | Solution                                                                                                                                                                                             |
|----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>The device does not work</b>        | Check that the plug is properly and firmly inserted into the socket and that the mains voltage is stable. Unplug the device and plug it back in. If it still does not work, contact customer service |
| <b>The device stops intermittently</b> | The most common cause is overheating due to a blocked air inlet or a dirty filter. Turn the device OFF, unplug it, clean the filter, and let it cool down, then start it again                       |
| <b>Unusual noise or smell</b>          | Stop using the device immediately and unplug it from the power source. Do not disassemble the device yourself - contact customer service                                                             |

## SAFETY PRECAUTIONS

---

- The device may be used by children aged 8 and above and by persons with reduced physical, sensory, or mental capabilities only under supervision or after being instructed on its safe use.
- Cleaning and maintenance must not be carried out by children without supervision. Do not let children play with the device.
- Parts of the device are magnetic - keep them away from pacemakers, defibrillators, payment cards, and electronic data carriers.
- Do not use the device near bathtubs, showers, sinks, or other containers filled with water.
- After using the device in the bathroom, always unplug the cord from the socket - proximity to water poses a hazard even when the device is switched off.
- In bathrooms, it is recommended to install a residual current device (RCD) with a rated residual operating current not exceeding 30 mA.
- Do not wrap the cord around the device body.
- When unplugging, always hold the plug - never pull the cord.
- Do not use extension cords.

- Do not touch the plug or the device with wet hands.
- The device has a thermal cut-out without automatic reset - if it switches off by itself, unplug it from the power source and let it cool down.
- Do not power the device through an external timer or a remotely controlled circuit.
- Do not insert hands or objects into the air inlet or outlet grille - risk of burns.
- Do not use the device when the air inlet or outlet is blocked, and be careful not to let your hair get caught in the air inlet.
- Do not use the device without the filter cover in place.
- Attachments become hot during operation - exercise caution when changing them.
- Do not use the device for purposes other than drying and styling hair.
- If the device operates intermittently, makes an unusual noise or smell - stop using it immediately and unplug it from the power source.
- If the product is damaged, has been dropped, or is not working properly, do not disassemble or repair it yourself - contact customer service.
- If the power cord or plug is damaged, the repair must be carried out by the manufacturer or an authorized service point.
- When the plasma function is active, a specific odor may appear, which is not harmful to health.
- Properly dispose of the packaging - keep the bag away from infants and small children (suffocation hazard).

## TECHNICAL SPECIFICATIONS

---

- Model: SV-009MM
- Rated voltage: 220-240 V ~ 50-60 Hz
- Cord length: 2.7 m
- Power consumption: 1300 W
- Display: wind speed and temperature mode indications
- Motor speed: up to 110,000 RPM
- Noise level: 70 dB
- Plasma ion concentration: 400 million ions/cm<sup>3</sup>
- Weight: 477 g (with cord, without attachments)

### **Made in PRC**

Keep this manual for future reference.

# WARRANTY

---

The warrantor is: ITRG-ZIĘBA-MAGIERA-STYLIŃSKI SPÓŁKA JAWNA, VAT NO: PL9452174051, Christo Botewa 6B/B4, 30-798 Cracow, Poland

The warranty covers the product: SkinVibe Nuvia AirPlasma MultiStyler.

Congratulations on your purchase.

This product is covered by a 24-month warranty from the date of purchase. Warranty service is provided based on proof of purchase (receipt or VAT invoice).

In the event of a defect, the Buyer should contact the Authorized Service Center at the following address: Christo Botewa 6B/B4, 30-798 Cracow, Poland.

The following contact channels are available:

- By email:
  - [contact@skinvibe.eu](mailto:contact@skinvibe.eu)
  - [RMA@itrg.pl](mailto:RMA@itrg.pl)

The Warrantor collects the product from the Buyer at its own cost. Repair or replacement costs, including shipping, labor, and materials, are covered by the Warrantor.

In the case of a justified claim, the Warrantor commits to repairing or replacing the faulty product or its damaged parts free of charge within 30 days of receiving the complaint. The Warrantor is obliged to respond to a complaint containing claims under this warranty within 14 days of receiving it.

The warranty does not cover the risk of accidental loss or damage of the product during transport to the Authorized Service Center if the transport is organized by the Buyer.

The warranty does not cover:

- a) normal wear and tear;
- b) periodic technical inspections;
- c) damage and failures caused by improper use or use inconsistent with the user manual, or handling of the Product in a manner inconsistent with normal applications;
- d) damage resulting from use of the Product contrary to its intended purpose, including:
  - physical, aesthetic, or surface damage caused by improper use or modifications;
  - improper installation or use of the Product not in accordance with the instructions; lack of servicing in accordance with the manufacturer's recommendations;
  - installation not compliant with the user manual and applicable safety standards;

- use of the Product with non-recommended accessories or peripheral devices;
- repairs carried out by unauthorized persons;
- modifications of the Product without the consent of the importer or the Authorized Service Center, such as:
  - increasing the parameters of the Product beyond the values specified in the manual;
  - adapting the Product to local technical standards in countries other than those for which it was designed;
  - negligence.

e) accidents, fire, contact with liquids or moisture, chemicals and other substances, flooding, vibrations, excessive heat, inadequate ventilation, connection to excessive or incorrect voltage, radiation, electrical discharges including lightning, as well as the action of any external forces and impacts.

The warranty applies within the territory of the European Union.

In the event of non-conformity of the sold product with the contract, the Buyer is entitled by law to legal remedies from and at the cost of the seller, and the warranty does not affect these legal remedies.

## CONTACT INFORMATION

---

**Contact:** [contact@skinvibe.eu](mailto:contact@skinvibe.eu)

**Service:** [RMA@itrg.pl](mailto:RMA@itrg.pl)

### Importer and distributor:

ITRG-ZIĘBA-MAGIERA-STYLIŃSKI SPÓŁKA JAWNA  
 Christo Botewa 6B/B4  
 30-798 Cracow, Poland  
 VAT NO: PL9452174051

### Manufacturer:

VISIONARY GROUP SP. Z O.O.  
 Skwierzyńska 2  
 04-853 Warsaw, Poland  
 VAT NO: PL9522268798

# CERTIFICATES



### Environmental Protection Instructions

Note: This device is marked in accordance with the European Directive 2012/19/EU and the Polish Act of 11 September 2015 on Waste Electrical and Electronic Equipment with the symbol of a crossed-out waste container.

This marking indicates that this equipment, after its period of use, cannot be disposed of together with other household waste.

Warning: do not dispose of this equipment with municipal waste!!!

The product must be disposed of through selective collection at designated collection points.

Proper handling of waste electrical and electronic equipment helps to avoid harmful effects on human health and the environment due to the presence of hazardous substances and improper storage and processing of such equipment.



### Child Safety Warning

Note: This product is not intended for children under 3 years of age.

The crossed-out baby face symbol indicates that the device may pose a choking hazard or other risk if used by small children.

Keep out of reach of children.



### Water and Electrical Device Warning

Note: This is an electrical device – do not immerse it in water or use it near liquids (e.g., during bathing).

The crossed-out bathtub symbol indicates that the device must not be used in the bath, under the shower, or near any water-filled container.

Use extra caution when operating in bathrooms.

## EU DECLARATION OF CONFORMITY (No. SV-009/2026/CE/1)



**Product:** SkinVibe Nuvia AirPlasma MultiStyler (model no. SV-009MM)

### Manufacturer:

Visionary Group Sp. z o.o.

VAT NO: PL9522268798


Skwierzyńska 2

04-853 Warsaw, Poland

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The product listed above is in conformity with the Low Voltage Directive 2014/35/EU, the Electromagnetic Compatibility Directive 2014/30/EU and the RoHS Directive 2011/65/EU as amended by (EU) 2015/863. The following standards have been applied:

- EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A14:2019+A2:2019+A15:2021+A16:2023
- EN IEC 60335-2-23:2023+A11:2023+A1:2023
- EN 62233:2008
- EN IEC 55014-1:2021
- EN IEC 55014-2:2021
- EN IEC 61000-3-2:2019+A1:2021+A2:2024
- EN 61000-3-3:2013+A1:2019+A2:2021

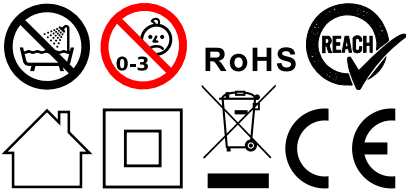

## MANUALS IN OTHER LANGUAGES

---

Full product manuals in other languages are available online.

Visit our website:

**[www.skinvibe.eu/pages/manuals](http://www.skinvibe.eu/pages/manuals)**

or scan the QR code below:

